

# MOUNTING INSTRUCTIONS

## ABSORBER

This manual applies to the following products: Kids Line Wall Cloud 720, Kids Line Wall Cloud 960, Kids Line Wall Cloud 1100, Kids Line Wall Star 440, Kids Line Wall Star 700, Kids Line Wall Star 980, Kids Line Wall Sun 520, Kids Line Wall Sun 715, Kids Line Wall Sun 980



## EQUIPMENT

The following equipment is required to install the absorber:

- ✓ Knife/blade
- ✓ Tape measure/spirit level
- ✓ Glue gun
- ✓ t.akustik adhesive
- ✓ Pencil

*We recommend using the t.akustik adhesive (item no. 177265, available as an option) for the installation.*

## UNBOXING

Carefully open the package and remove the absorbers.




## PREPARE GLUE GUN

Open the adhesive cartridge carefully with a knife or blade and unscrew the cap. Insert the adhesive cartridge into the glue gun.

## APPLY GLUE

Apply the glue in an even track along the outer edges. In addition, apply adhesive in the middle of the absorber, e.g. in the form of a cross, so that the central point of the absorber can also be fixed firmly to the wall.

*Depending on the nature of the wall, apply the adhesive more generously along the outer edges if necessary.*

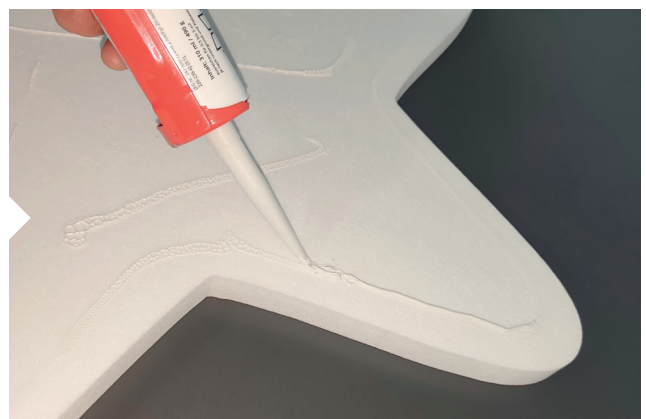



## ALLOW ADHESIVE TO ACT

Leave the adhesive on the absorber for five minutes to improve the absorber's adhesion to the wall.

## INSTALL ABSORBER

If necessary, mark the position on the wall using a tape measure or a spirit level.  
Place the absorber in the marked position and press the absorber evenly along the adhesive tracks for about 2 minutes.



Find additional solutions for your space on our website:  
[www.takustik.com](http://www.takustik.com)



Share your installation with us on Instagram:  
[www.takustik.com/instagram](https://www.takustik.com/instagram)



Find additional assembly instructions on YouTube:  
[www.takustik.com/youtube](https://www.takustik.com/youtube)

This document contains important information. Read and follow the instructions. Keep the document for future reference. If you pass the product on to others, please include this document. Contents are subject to change. Please refer to the latest version of the documentation, which is available for download at [www.thomann.de](http://www.thomann.de).

This product is designed to optimise room acoustics. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damage resulting from improper use.

This product may be used only by persons with sufficient physical, sensory, and intellectual abilities and with the relevant knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.



### Risk of injury and choking hazard for children!

Children can suffocate on packaging material and small parts. Children can injure themselves when handling the product. Never allow children to play with the packaging material and the product. Always store packaging material out of the reach of babies and small children. Always dispose of packaging material properly when it is not in use. Never allow children to use the product without supervision. Keep small parts away from children and make sure that the product does not shed any small parts that children could play with.



### Risk of cuts to the hands from sharp blades!

When the adhesive is opened with a knife or blade, there is a risk of cutting. When opening the adhesive, make sure not to injure your fingers/hands. Wear protective gloves if necessary.



### Disposal of the packing material

Environmentally friendly materials have been chosen for the packaging. These materials can be sent for normal recycling. Ensure that plastic bags, packaging, etc. are disposed of in the proper manner. Do not dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the instructions and markings on the packaging.

### Disposal of your old product

Do not dispose of your old product with your normal household waste; instead, deliver it for controlled disposal by an approved waste disposal firm or through your local waste facility. Proper disposal protects the environment as well as the health of your fellow human beings. This is because the proper handling of old products negates the potential negative effects of hazardous substances, and because it conserves resources by recycling them. Also note that waste avoidance is a valuable contribution to environmental protection. Repairing a device or passing it on to another user is an ecologically valuable alternative to disposal. You can use the Thomann GmbH classified ads, for example.



Observe the disposal note regarding documentation in France.